

## Accessing the Menu.

You may be allowed to access certain system functions in the Menu.



Logon to the Terminal as described earlier. (PIN code + OK) The display will show the Area Status etc. as before.

MENU

Now press the MENU key. The Menu key can be used at any time to return to the Main menu

**\*\* Main Menu \*\***  
**1=Info 2=Access**

The display will scroll through the list of Menu options that you are allowed to access.



Press a digit key to select the option required. (Option 7 is available to the "Installer" only.)  
**Note:** Some options in Sub-menus (e.g. User Codes, Review & Test Inputs) require another digit to be pressed. Display will show a menu list similar to the one opposite when required.

0-Area ON/OFF  
1-Info (e.g. Review) 5-Times  
2-Access (Users) 6-Misc  
3-Isolate 8-Service  
4-Test (Zones) 9-Control

## Keypad Functions in the Menu.



Scrolls up and down a list of available items to view, program or control. e.g. Users, Zones, Review & Home Auxiliaries.



Moves cursor left or selects previous question if the cursor is at the start of the field.



Moves cursor right or Scrolls through multiple choice options.

HELP

Provides relevant help messages on the display whenever required. e.g. Will tell you what to do next if you are unsure.

OK

Saves current screen & moves to next question.

OFF

Clears the screen or Selects first multiple choice option.

ON

Switches between different modes for selecting an item or answering a question. e.g. Provides option of selecting an item by ID no. (Zone E01:Z03) or by name (OFFICE PIR).



In programming questions that require a Yes/No answer, the "N" (5) key selects No, and the "Y" (9) key selects Yes.

# Concept 4000

## INTEGRATED SECURITY & ACCESS CONTROL SYSTEMS

# USER'S QUICK REFERENCE CARD

## FOR ELITE LCD TERMINALS

- Notes:** 1) For Prisma Colour Graphic Terminals also refer to the Prisma Terminal User Manual. (P/N: 635060U)  
2) For Touchscreen Terminals refer to the Touchscreen Terminal User Guide. (P/N: 635022UG)

Go to [www.innerrange.com.au/products.php](http://www.innerrange.com.au/products.php) and select "Downloads".

## Operations while not logged on.

The following operations do not require PIN code access.

- MENU , 1 ABC Quick Alarm Review. (If enabled in your system)  
MENU , 2 DEF System Information. (Version information, etc.)  
MENU , 3 GHI Current system Time and Date.  
> Home Auxiliary Control. (If enabled in your system)

## LOGON to an LCD Terminal.

Logging on is the first step performed in most operations.



Enter your secret PIN code using the digit keys, then press the OK key.

**Good Morning**  
**LEO LYONS**


If there are no messages to be acknowledged, the Display will first greet and identify you. (Note: Greeting option can be disabled if required)

**OFFICE**  
**is On. Push Off**

The status of the first Area (or Area List) that you are allowed to control is displayed, with a prompt to perform an ON or OFF operation.

## Turn Area/s ON or OFF.

Once you have Logged on to a Terminal, and see the Area status with the “Push Off” or “Push On” message, you may perform the ON or OFF operations.

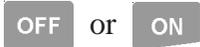

At the prompt, turn the displayed Area (or Area List) OFF or ON by pressing the appropriate key.

**Remember:** You have a limited time to turn an Area OFF once you have entered, and a limited time to exit when you have turned an Area ON.

**NOTE: Quick Arm/Disarm.** Your system may be configured to allow a nominated Area to be controlled simply by entering your PIN code, then the OFF or ON key. i.e. OK key not required. (V7.8 or later only with LCD Terminal V8.3 or later)



If you are allowed to control multiple Areas:

-DISPLAY MODE. The Display mode can be changed from Single Area to Area List and vice versa, by pressing the Right Arrow key.



-AREA SELECTION. You may select other Areas or Area Lists by using the Up and Down Arrow keys or the letter key that the Area name begins with.

**Zone Problem**  
**DOOR is in ALARM**

After pressing the ON key, the display may show a message like this. It means that the item displayed is either faulty or in an alarm state, and the Area will not turn ON.

Try and rectify the problem before trying again. If this is not possible, You may be allowed to ISOLATE the item while the “Zone Problem” message is displayed, by pressing the OK key.

OK

## Access (Un-lock) a Door.

Terminals may be programmed to momentarily Unlock a Door to allow access.



Logon to the Terminal as described earlier. (PIN + OK) Area Status will display as before.



Press OK a second time to perform the Door Access operation. (Not necessary for Terminals/Users designated as “Access Only”)

**Door now**  
**un-locked**

The display will verify that the operation was successful, or provide a message showing why the operation could not be performed.

## Acknowledge an Alarm.

Alarm messages must be acknowledged by a User with the appropriate authority. These messages provide precise information of the type of alarm, the Area it has occurred in, and the Zone or System Input that generated the alarm.

**Had Alarm in**  
**WAREHOUSE**

An Alarm message may be displayed on the Terminal, and indicates which Area the Alarm has occurred in.



Logon to the Terminal as described before. (PIN code + OK)

**\*\* Area Alarm \*\***  
**Had Alarm on PIR**

The display will show the specific details of the Alarm and provide a scrolling message if more than 16 characters. e.g. “Had Alarm on FRONT DOOR in FOYER”

OK

Note alarm details, then press the OK key to acknowledge the message. The display will now show the Area ON / OFF message to allow you to continue with your operation. e.g. Turn the Area OFF.

## LOGOFF the Terminal.

When you have completed your operations, you must Logoff the Terminal.

END

Press the END key. (END also lets you start again, if you make an error entering your PIN)